


Quickrod before serial # 460 and Nitro

Splawn Footswitch Jack A connections

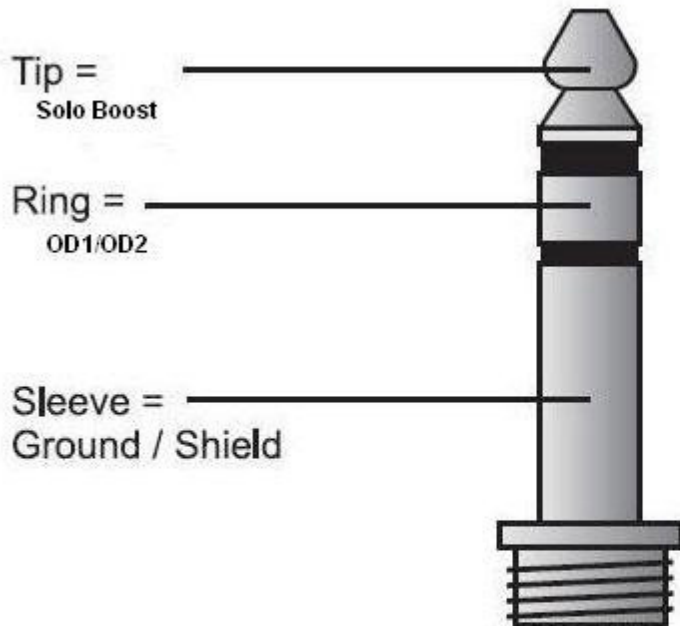

Splawn Footswitch Jack B Connections

